SAMSUNG

Operating Instructions

VACUUM CLEANER

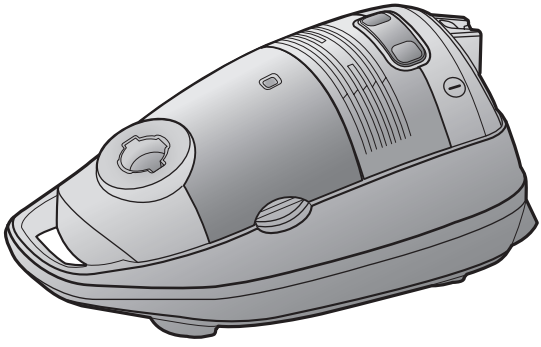

❊ Before operating this unit, please read the instructions carefully.
❊ For Indoor use only.

Register your product at www.samsung.com/register

DJ68-00364D REV(0.3)

IMPORTANT SAFEGUARDS

1. Read all instructions carefully. Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate on the bottom of the cleaner.
2. WARNING: Do not use the vacuum cleaner when rug or floor is wet.
   Do not use to suck up water.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
   Children should be supervised to ensure that they do not play with the appliance.
4. Do not use the vacuum cleaner without the dust bag. Empty the dust bag before it is full in order to maintain the best efficiency.
5. Slide to the Stop (or Min) position before inserting a plug into the electrical outlet.
6. Do not use the vacuum cleaner to pick up matches, live ashes or cigarette butts. Keep the vacuum cleaner away from stoves and other heat sources. Heat can deform and discolour the plastic parts of the unit.
7. Avoid picking up hard, sharp objects with the vacuum cleaner as they may damage the cleaner parts. Do not stand on the hose assembly. Do not put a weight on the hose. Do not block the suction or the exhaustion part.
8. Switch the vacuum cleaner off at the machine before unplugging from the electrical outlet. Grasp the plug to disconnect cord from the electrical outlet before caring the dust bag and filters.
9. The plug must be removed from the socket out-let before cleaning or maintaining the appliance.
10. The use of an extension cord is not recommended.
11. If your vacuum cleaner is not operating correctly, switch off the power supply and consult an authorized service agent.
12. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
13. The vacuum cleaner is provided with a self-resetting thermal cut-out protection which automatically shut off current on over heating. Overheating can be caused by blockage in the filter, nozzle, tube or hose. After removing the cause and cooling the motor, vacuum cleaner automatically start again.

1 ASSEMBLING THE CLEANER

▶ Features may vary according to model.

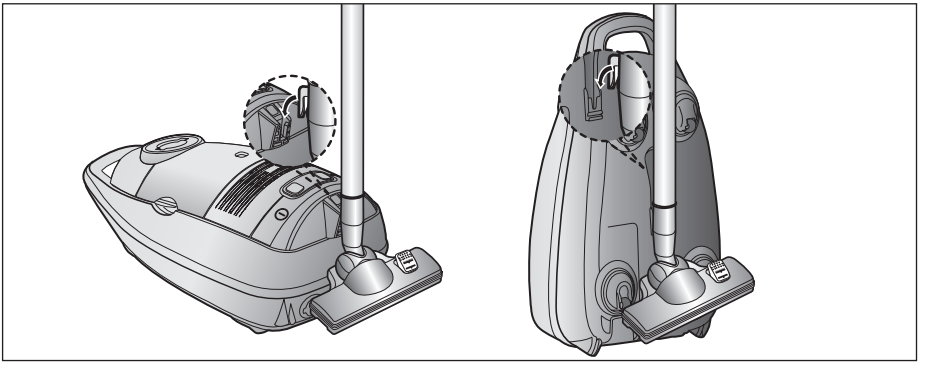

Parking floor nozzle for easier storage.

2 OPERATING THE CLEANER

2-1 POWER CORD

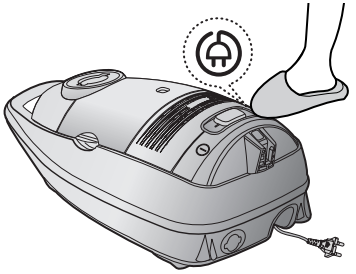

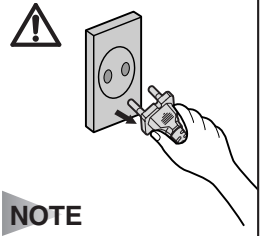

NOTE
Grasp the plug to disconnect cord from the electrical outlet.

2-2 ON/OFF SWITCH

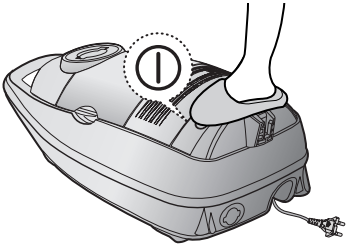

2-3 POWER CONTROL

1) BODY-CONTROL TYPE

MIN = For delicate surface e.g. net curtains.

MAX = For hard floors and heavily soiled carpets.

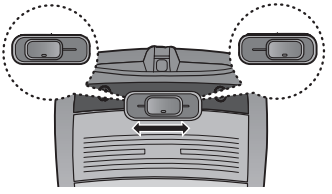

2) REMOTE-CONTROL TYPE

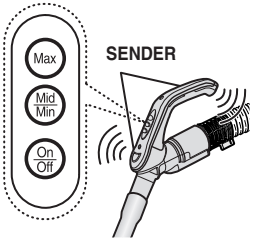

INFRARED-CONTROL

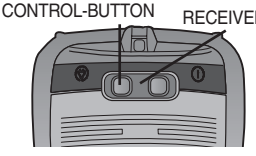

Press control button repeatedly to select correct mode.
(STOP → MIN → MID → MAX → STOP)

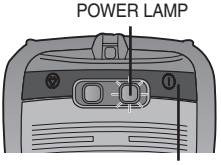

When pushed the “ON/OFF” switch button, the Power lamp is turned on automatically.

2-4 AIR CONTROL

To reduce suction for cleaning draperies, small rugs, and other light fabrics, pull the tap air until the hole is open.

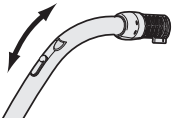

BODY CONTROL TYPE ONLY

2-5 USING THE BLOWER

Located on the left rear side of the cleaner.
1) Disconnect the hose from the body of the cleaner.
2) Connect the hose clamper to the blow hole.

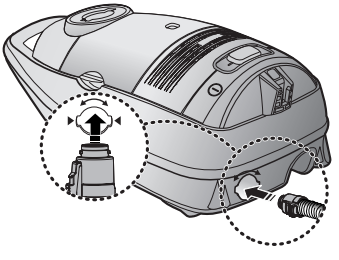

2-6 USING THE ACCESSORIES

- Dusting brush - for furniture, shelves, books, etc.
- Upholstery brush - for cushions and drapery.
- Crevice tool - for radiators, crevices, comers, between cushions.

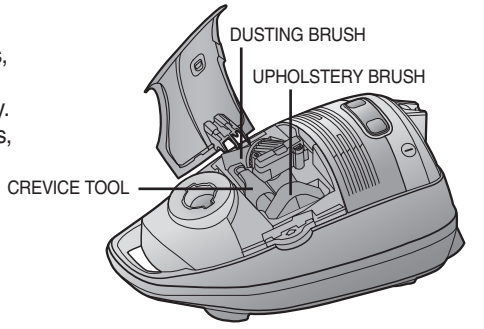

2-7 USING FLOOR TOOLS

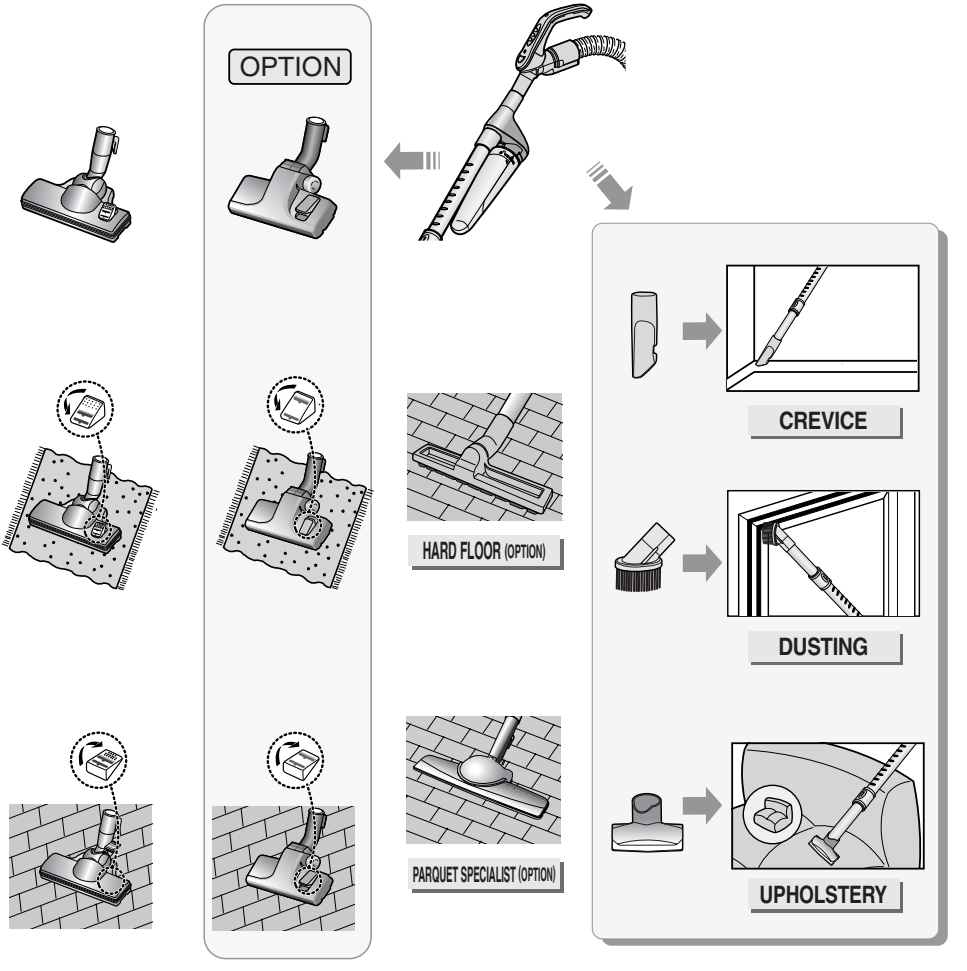

3 DUST FULL INDICATOR

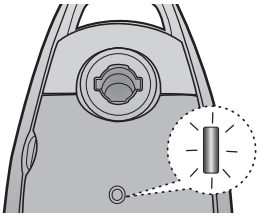

If the "Dust Full" indicator turns to red color while you are cleaning, the dust bag requires replacement

NOTE : If the "Dust Full" indicator continues to display red color even after having changed bag into new one, turn the cleaner off and check if there is any clogging in the hose, tube, floor nozzle, or on the inlet/outlet filter.

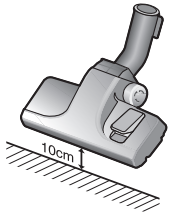

If the filter check indicator turns red with the inlet floating 10 cm above flat floor, clean it.

3-1 CHANGING THE DUST BAG

1

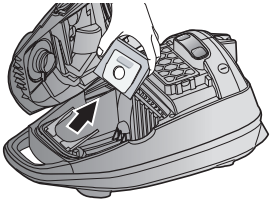

2

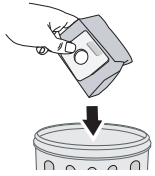

3

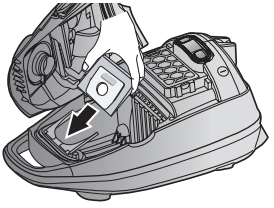

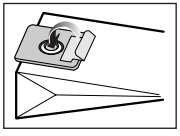

NOTE : A used dust bag can be sealed by removing the paper from the adhesive strip and sealing the strip over the hole.

OPTIONAL

• FOR CLOTH BAG
After using, if the cloth bag is full of dust, clean the cloth bag and use it again.

4 CLEANING THE CYCLONE FILTER(OPTIONAL)

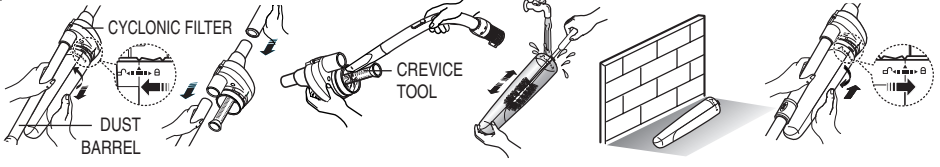

NOTE : The Cyclone Filter must be used at all times to retain optimum efficiency.

5 CHANGE THE BATTERY(OPTIONAL)

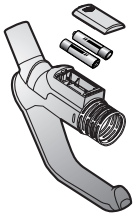

BATTERY TYPE : AA Size

NOTE : When the vacuum cleaner does not operate, replace the batteries. If the problem persists, please contact our authorized dealer.

WARNING

1. Never disassemble or recharge the batteries.
2. Never heat up the batteries or throw them into fire.
3. Do not reverse (+),(-) terminals.
4. Dispose the batteries properly.

6 CLEANING THE INLET FILTER

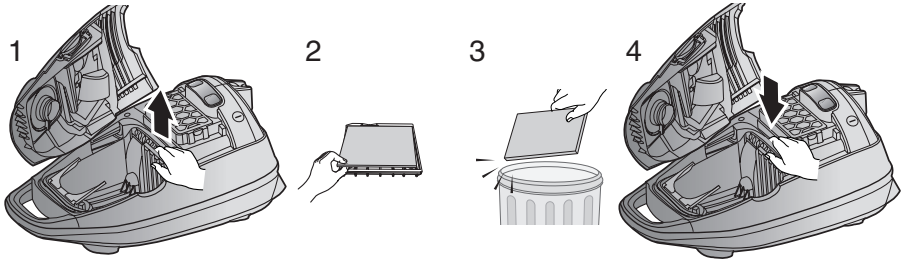

NOTE : Don't throw away the filter

7 OUTLET FILTER

OPTION : HEPA H11 + SILVER NANO

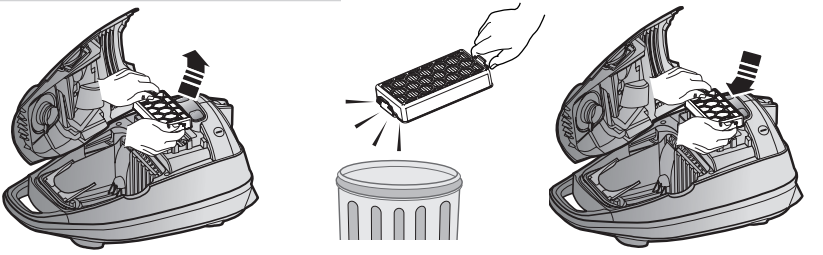

OPTION : HEPA H11

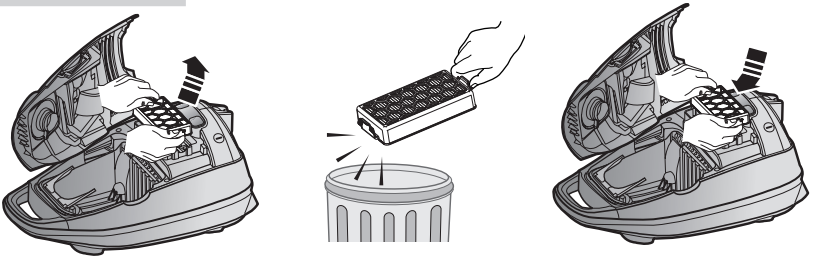

OPTION-MICRO FILTER + SILVER NANO

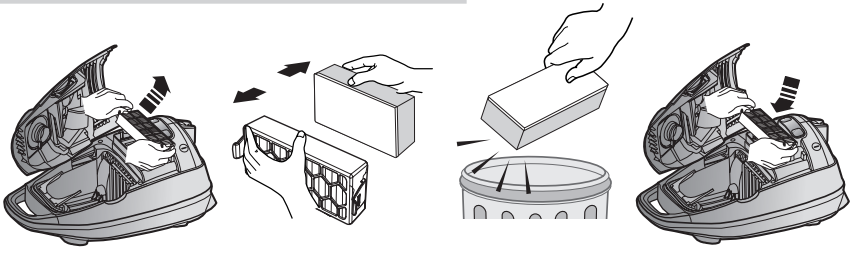

OPTION-MICRO FILTER

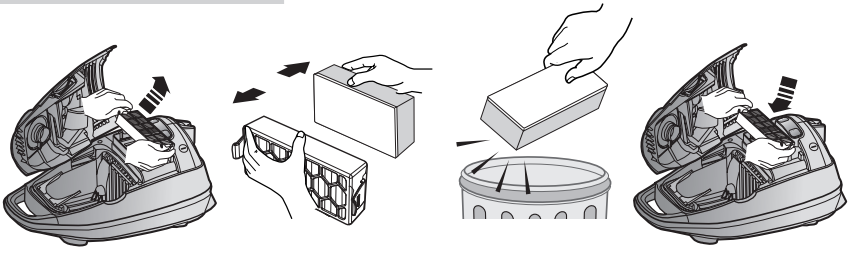

NOTE : Replacement filters or bags can be bought from your local Samsung distributor.

- IF YOU HAVE A PROBLEM

PROBLEM	CAUSE	REMEDY
Motor does not start.	No power supply. Thermal cut-out.	Check cable, plug and socket. Leave to cool.
Suction force is gradually decreasing.	Nozzle, suction hose or tube is blocked.	Check for blockage and remove.
Cord does not rewind fully.	Check that the cord is not twisted or wound unevenly.	Pull the cord out 2-3m and push down the cord rewind button.
Vacuum cleaner does not pick up dirt.	Crack or hole in hose.	Check hose and replace if required.
Low or decreasing suction	Filter is full with dust.	Please check filter and, if required, clean as illustrated in the instructions.

Design & specification are subject to change without notice.

انتخابی - فیلتر ماکرو + سیلورنانو

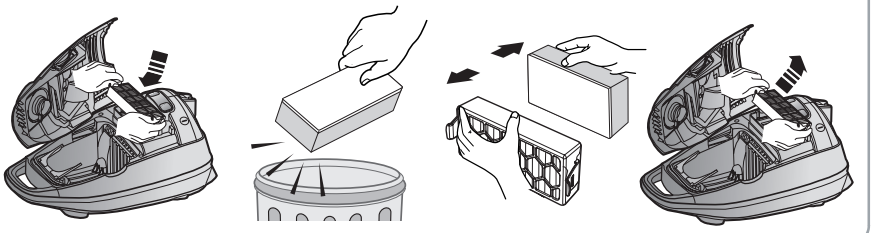

انتخابی ـ فیلتر ماکرو

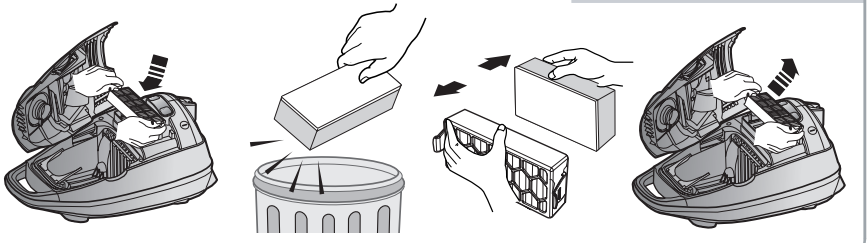

تذکر: فیلترها و کیسه های تعویض را می‌توانید از فروشنده محصولات سامسونگ تهیه نمائید.

- در صورت بروز مشگل

ایراد	علت	راه حل
موتور کارنمی‌کند .	فقدان منبع برق . قطع کن حرارتی .	کابل،دوشاخه وسوکت بررسی کنید . فرصت دهید تا موتور سرد شود .
قدرت مکش به تدریج کم می‌شود .	دهانه، خرطومی‌یالوله خرطومی مسدود شده است .	در صورت وجود انسداد آن را برطرف نمائید.
سیم به درستی جمع نمی‌شود .	بررسی کنیدسیم پیچ نخورده یاصدمه ندیده باشد .	سیم رابه‌اندازه ۳-۲ متر بیرون کشیده وسپس تکمه جمع کننده سیم رافشاردهید.
جارو برقی آشغالها را جمع نمی‌کند.	وجود سوراخ و یا ترک روی شیلنگ	پس از بررسی شیلنگ، در صورت نیاز آن را تعویض نمائید.
کاهش یا کم شدن مکش دستگاه	فیلتر از گرد و خاک پر شده است.	بعد از بررسی فیلتر در صورت نیاز همانند دستورالعملهای مصور آن را تمیز نمائید.

شرکت ***سام سرویس*** نمایندگی خدمات پس از فروش محصولات سامسونگ در ایران هیچگونه مسئولیتی در قبال دستگاههای فاقد کارت گارانتی ویژه ***سام سرویس*** ندارد.

طراحی و مشخصات ممکن است بدون اطلاع قبلی تغییر کند.

۵ تعویض باطری (انتخابی)

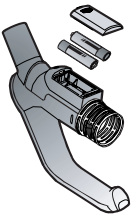

نوع باطری: سایز AA

تذکر : در صورت عدم کارکرد دستگاه جاروبرقی، باطریها را تعویض نمائید.اگر ایراد برطرف نشد، با فروشنده مجاز محصولات سامسونگ تماس بگیرید.

اخطار

۱. هرگز باطریها را باز و یا دوباره شارژ ننمائید.
۲.هرگز باطریها را در معرض حرارت زیاد قرار نداده و در آتش نیاندازید.
۳.ترمینالها (+)، (-) را معکوس نکنید.
۴.باطریها را به روش صحیح از بین ببرید.

۶ تمیز کردن فیلتر ورودی

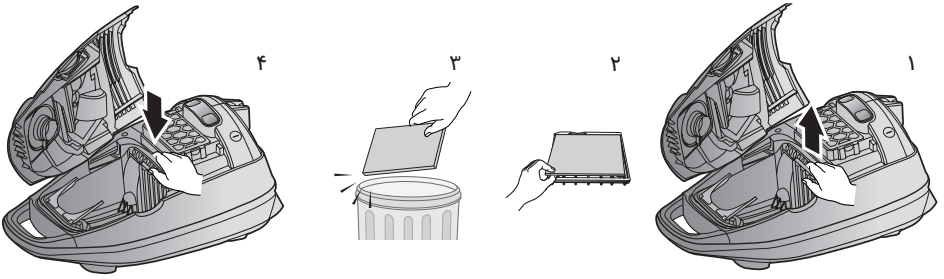

تذکر: هرگز فیلتر را دور نیاندازید.

۷ فیلترخروجی

انتخابی : HEPA H11 + سیلور نانو

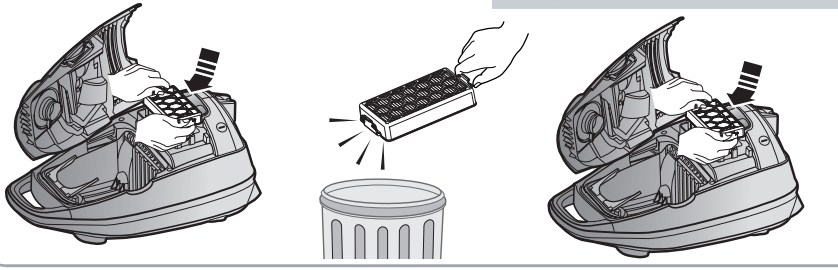

انتخابی : HEPA H11

۳ نشانگر پر شدن کیسه خاک

اگر نشانگر "Dust Full" در هنگام تمیز کردن قرمز شد، کیسه خاک دستگاه نیاز به تعویض کردن دارد.

تذکر : در صورت تعویض کیسه خاک با یک کیسه خاک جدید و روشن ماندن چراغ نشانگر "Dust Full" ، در مرحله اول جاروبرقی را خاموش کرده و سپس مسدود شدن شیلنگ، لوله، خرطومی کف و حتی فیلترهای ورودی و خروجی را بررسی نمائید.

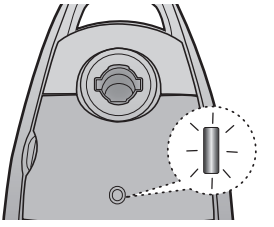

۳-۱ تعویض کیسه خاک

اگرنشانگر فیلتر در هنگام جارو کردن سطوح بالا تر از۱۰ cm قرمز شد ، آن را تمیز نمائید.

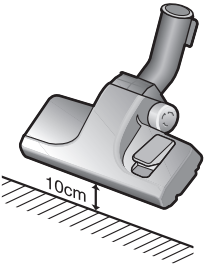

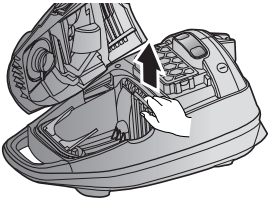

۳

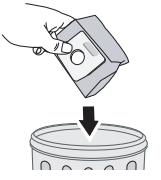

۲

۱

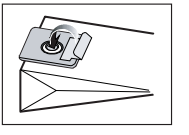

تذکر : کیسه خاک پر شده را می‌توانید با جدا کردن کاغذ از قسمت چسب دار و پوشاندن سوراخ، دور بیاندازید .

انتخابی

- برای مدلهای دارای کیسه پارچه ای پس از استفاده در صورت پر بودن کیسه، آن را تمیز نموده و از کیسه دوباره استفاده نمائید.

۴ تمیز کردن فیلتر سیکلون (انتخابی)

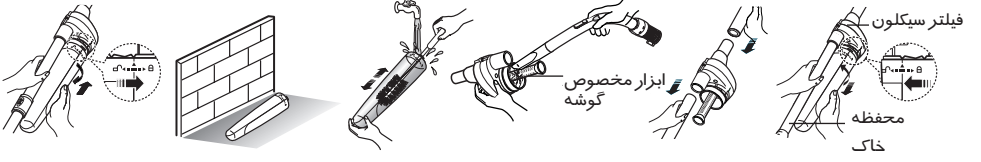

تذکر : برای حفظ کیفیت بهینه لازم است تا از فیلتر سیکلون به صورت دائمی استفاده شود.

۲-۶استفاده از متعلقات

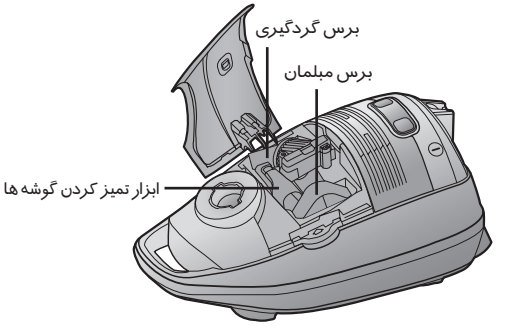

- برس گردگیری، برای لوازم خانگی ، قفسه ها لباسها و غیره .
- برس مبلمان برای پرده ها و کوسن ها و مبل
- ابزار تمیز کردن گوشه ها برای رادیاتورها، بین کوسن ها و کنج ها .

۲-۷استفاده از ابزار کف

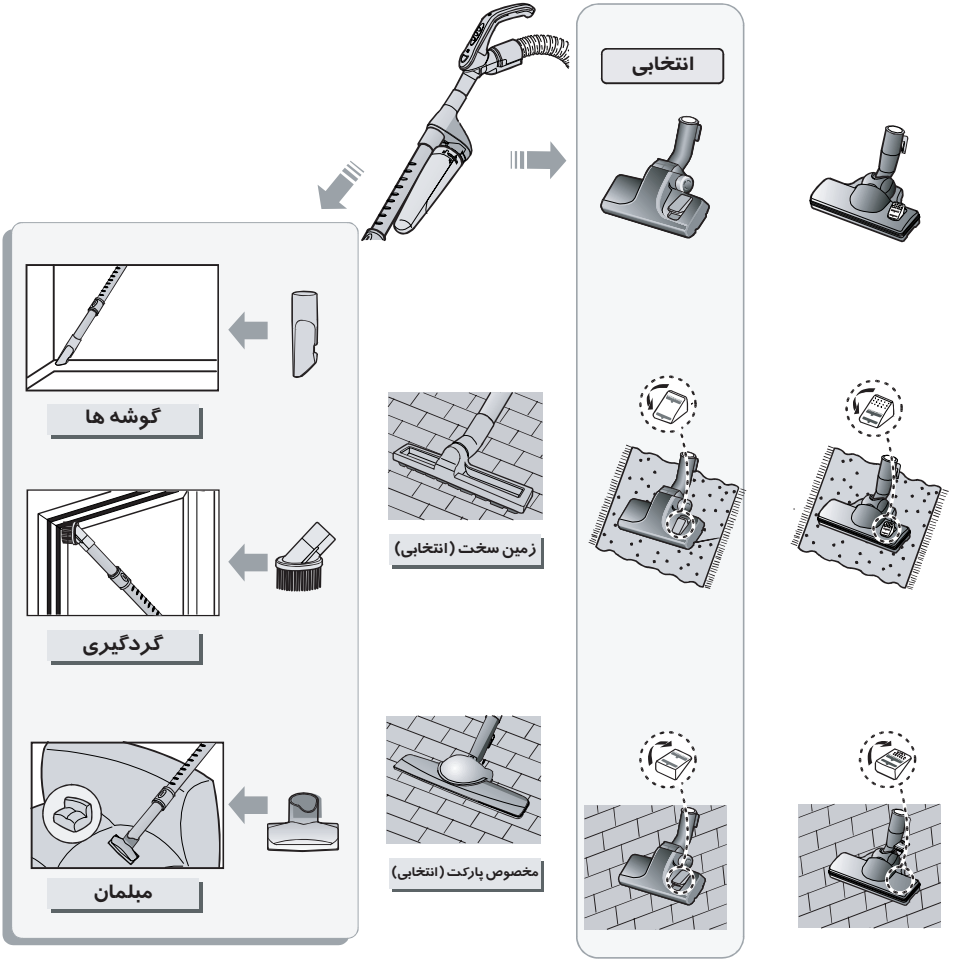

۲-۱سیم برق

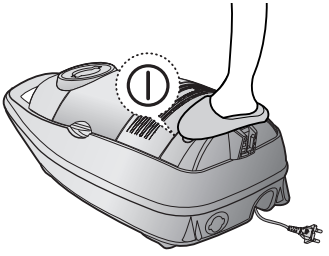

تذکر :
هنگام جدا کردن دوشاخه از پریز برق، حتماً دوشاخه را بکشید .

۲-۲کلید روشن / خاموش

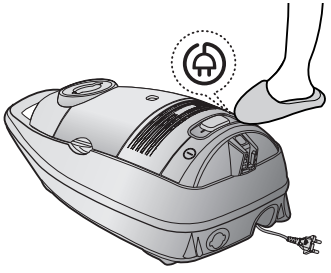

۲-۳کنترل توان

۱) کنترل بر روی بدنه دستگاه

MIN= برای سطوح ظریف مانند پرده توری

MAX = برای سطوح سفت مانند موکت و فرشهای ضخیم

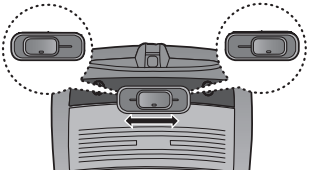

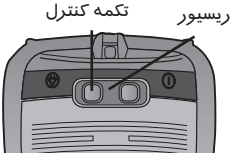

برای انتخاب حالت صحیح ، تکمف کنترل را پی در پی فشار دهید.

(STOP→MIN→MID →MAX→STOP)

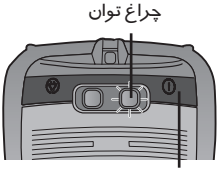

هنگامیکه تکمه کلید"خاموش/روشن" را فشار دهید، چراغ توان به طور خودکار روشن می‌شود.

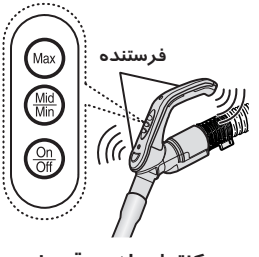

کنترل مادون قرمز

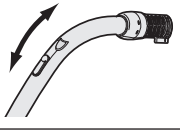

فقط نوع دارای کنترل روی بدنه

۲-۴کنترل جریان هوا

برای کاهش قدرت مکش، هنگام تمیز کردن پرده ها، قالیچه ها و پارچه های نازک، درپوش هوا را بکشید تا دریچه باز شود.

۲-۵استفاده از دمنده

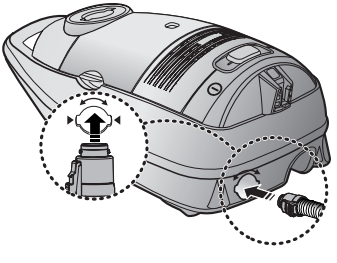

در قسمت پشتی و سمت چپ دستگاه واقع شده است.

۱) شیلنگ را از بدنه جاروبرقی خارج نمائید.

۲) گیره شیلنگ را به دریچه خروج هوا وصل نمائید.

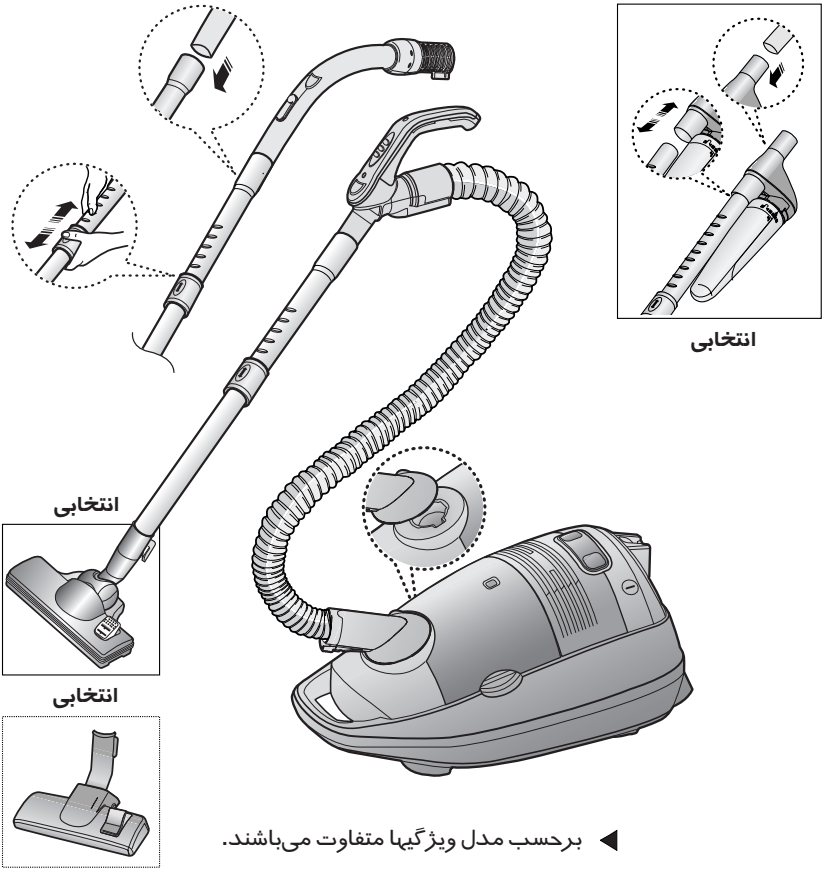

◄ برحسب مدل ویژگیها متفاوت می‌باشند.

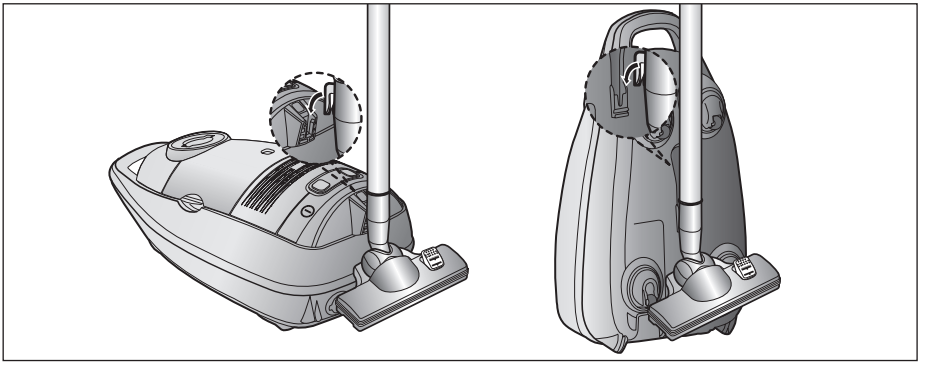

برای نگهداری راحتتر ، خرطومی را در محل مورد نظر قرار دهید.

نکات ایمنی مهم

۱. دستورالعملها رابادقت بخوانید.قبل از روشن کردن دستگاه مطمئن شویدولتاژمنبع برق باآنچه در صفحه مدرج در کف جارو برقی نشان داده شده یکسان است.

۲.اخطار: زمانیکه فرش یازمین خیس است از جارو برقی استفاده نکنید.
برای جمع کردن آب از این دستگاه استفاده نکنید .

۳.این وسیله نباید توسط افراد خردسال و یا ناتوان استفاده شود مگر آنکه توسط یک شخص آگاه کاملاً بر کار آنها نظارت شود و استفاده ایمن از دستگاه تضمین گردد. کودکان باید تحت نظارت قرار گیرند تا با دستگاه بازی نکنند.

۴.جاروبرقی رابدون کیسه خاک استفاده نکنید.برای رسیدن به بازده بیشترکیسه جاروبرقی را قبل ازاینکه کاملا پرشود خالی کنید.

۵.قبل از وصل کردن سیم برق دستگاه به پریز، تکمه را در وضعیت Stop (یا min) قرار دهید.

۶.ازجاروبرقی برای برداشتن چوب کبریت، خاکسترهای گداخته یاته سیگار استفاده نکنید.جاروبرقی رادورازبخاری یا هرمنبع گرمازای دیگر قرار دهید.حرارت، شکل ورنگ بخشهای پلاستیکی دستگاه راتغییر می دهد.

۷.از بلند کردن اشیای سخت وبرنده توسط جارو برقی خودداری نمایید ، زیراممکن است به قسمتهای مختلف جارو صدمه بزند.برروی لوله خرطومی نایستید و روی آن وزنه نگذارید . مکش یابخش خروج هوارامسدود نکنید .

۸.قبل از خارج کردن دو شاخه جارو برقی از برق، دستگاه را خاموش کنید.
در هنگام تعویض کیسه جارو برقی و یا فیلتر برای جلوگیری از بروزخطر، در عوض کشیدن سیم ، دو شاخه را بکشید .

۹.قبل از تمیز کردن و یا تعمیر دستگاه، دوشاخه را از پریز برق خارج نمائید.

۱۰.استفاده از سیم رابط توصیه نمیشود.

۱۱.اگر جارو برقی شمابه درستی کارنمیکند، آنراخاموش کرده وبه نمایندگی مجاز مراجعه نمایید.

۱۲.در صورت خراب شدن سیم برق، لازم است تا سیم توسط کارخانه سازنده و یا فرد آگاه و مطمئن تعویض شود تا از بروز حادثه جلوگیری شود.

۱۳.این جارو برقی دارای قطع کن حرارتی خودکار می‌باشد که دستگاه را در زمان ایجاد حرارت زیاد به طور خودکار خاموش می کند. ایجاد حرارت زیاد می‌تواند بدلیل مسدود شدن فیلتر، خرطومی، شیلنگ و یا لوله باشد. پس از برطرف شدن عیب و خنک شدن موتور دستگاه، جاروبرقی به طور خودکار دوباره روشن می‌شود.

راهنمای استفاده

سامسونگ
فقط با ضمانت سام سرویس
www.samserviceco.com

سام
سرویس

جارو برقی

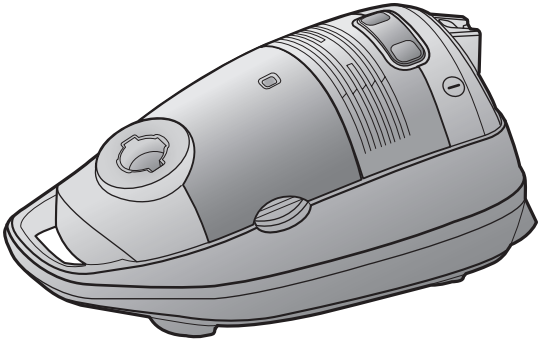

* قبل از استفاده از این دستگاه لطفاً راهنما را به دقت مطالعه کنید .
* فقط برای استفاده در داخل خانه.

لطفا اطلاعات محصول را در سایت www.samsung.com/register ثبت کنید.

DJ68-00364D REV(0.3)